


The product contains one or more of following materials:
Wood, metal, plastic.



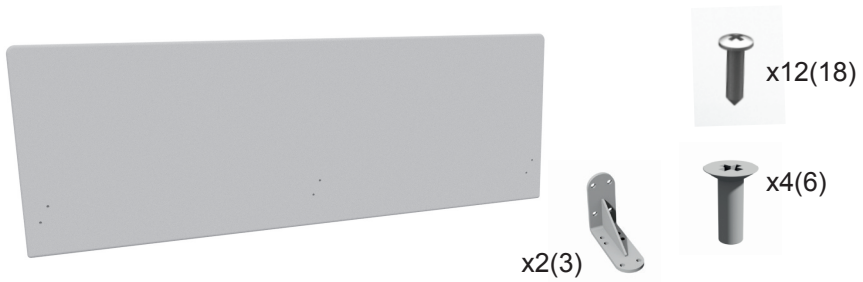

Start by assemble the brackets to the screen. Use the M8 screws in the burnt holes, 2xM8 / bracket. Don't tighten the screws to hard. This will damage the chipboard and the screen will not be fixed proper to the desk.

Use the wooden screws to assemble the screen to the desk.



The middle bracket is only for screens that are 1800 mm wide or wider.

